 



СПИСОК УЗЛОВ ДЛЯ POLARIS 0850927 STAR

//WWW.OEM.MOTO-ALL.RU/


ТЕЛ.: +7 (495) 177-12-75

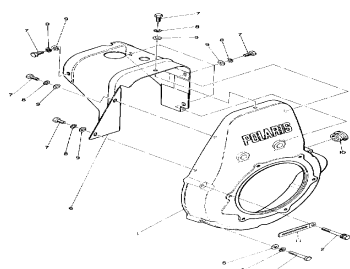

 
Blower housing (star)

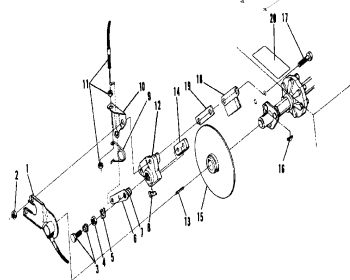


Brake assembly

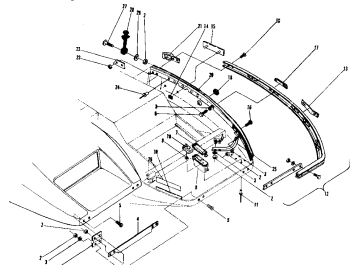 


Bumper and hinge

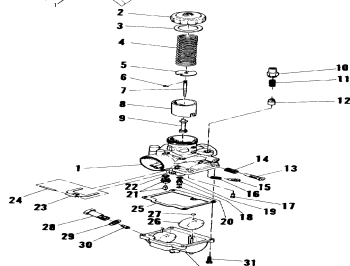 


Carburetor

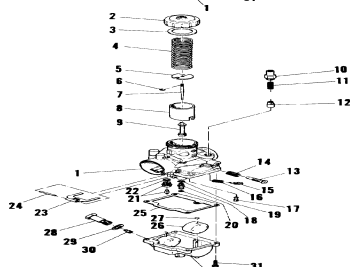 


Carburetor (ss)

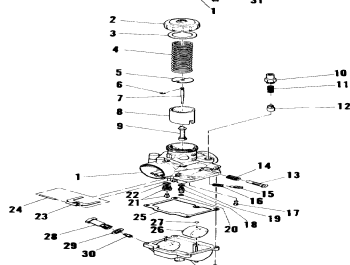 


Carburetor (star)

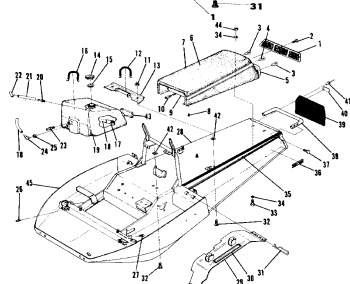 


Chassis and seat

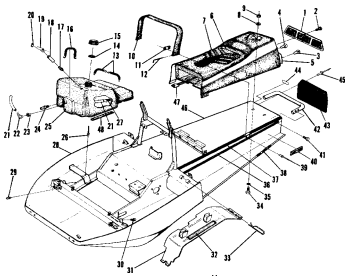 


Chassis and seat (ss)

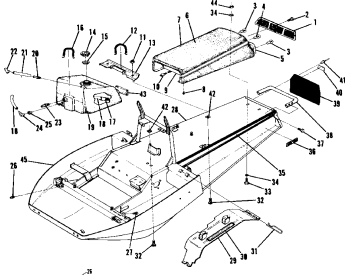 


Chassis and seat (star)

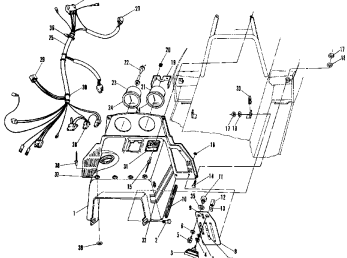 


Console

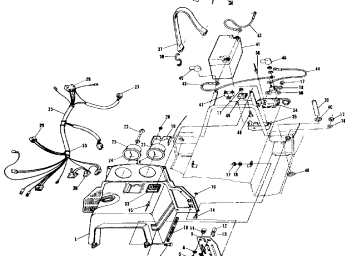 


Console and electrical

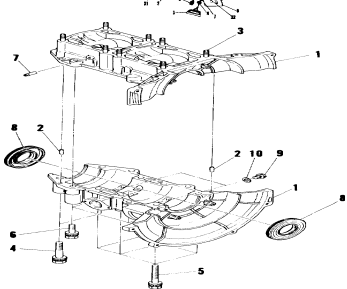 


Crankcase

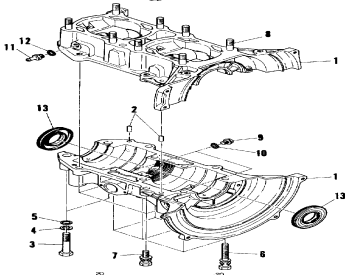 


Crankcase (ss)

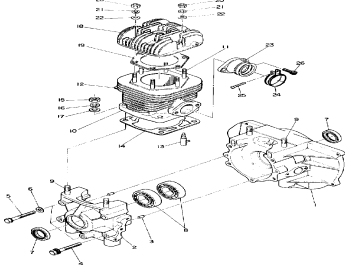 


Crankcase and cylinder (star)

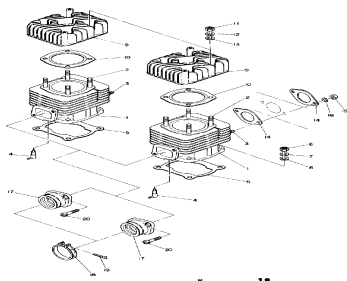 


Cylinder

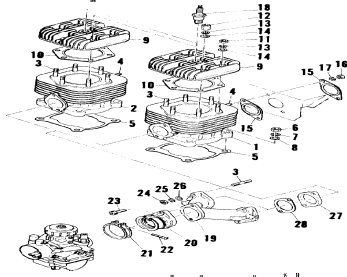 


Cylinder (ss)

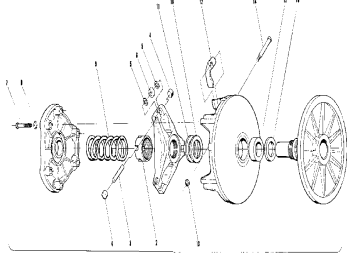 


Drive clutch production

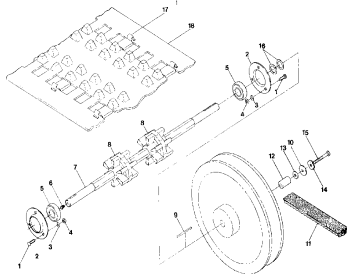 


Drive train

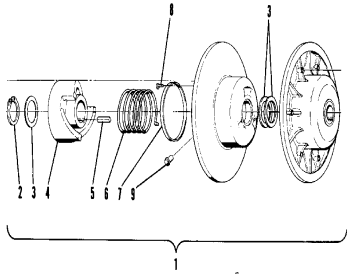 


Driven clutch

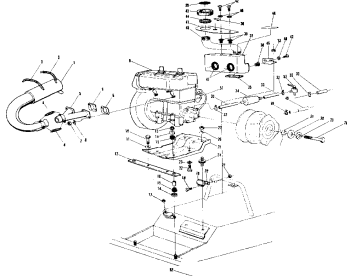 


Engine mounting

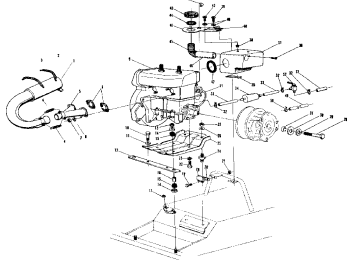 


Engine mounting (ss)

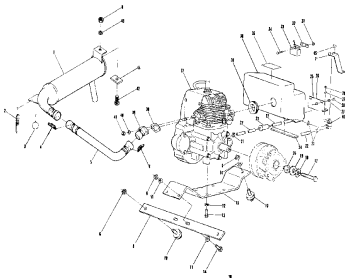 


Engine mounting (star)

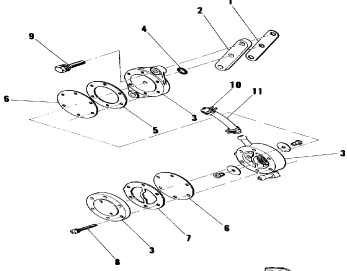 


Fuel pump (star)

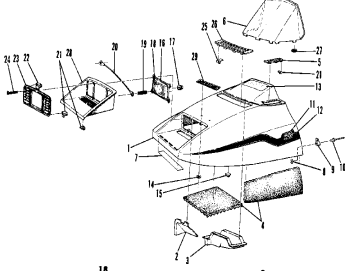 


Hood

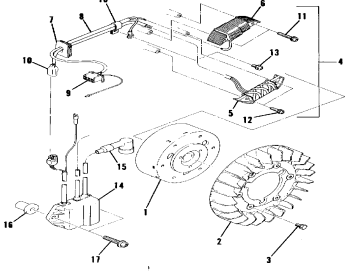 


Magneto

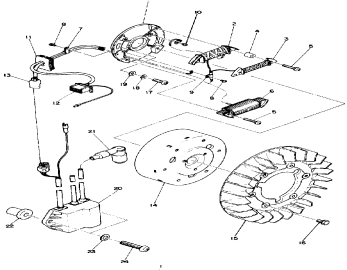 


Magneto (ss)

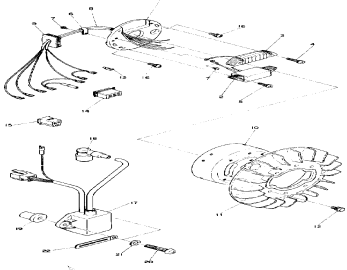 


Magneto (star)

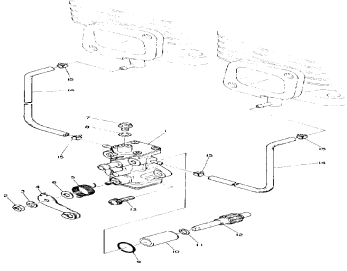 


Oil pump

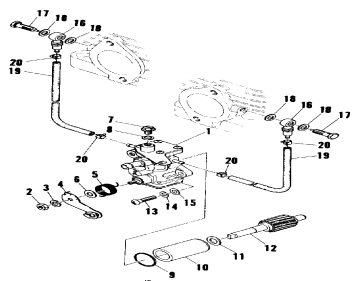 


Oil pump (ss)

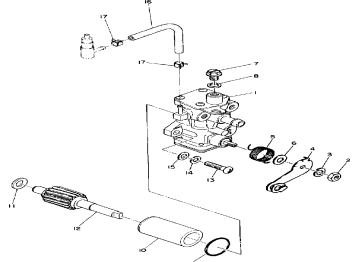 


Oil pump (star)

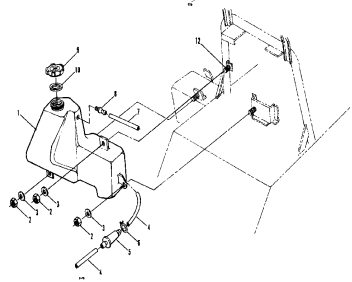 


Oil tank

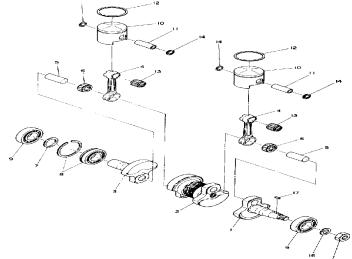 


Piston and crankshaft

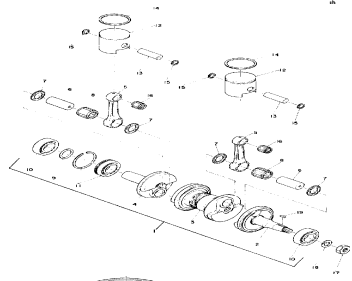 


Piston and crankshaft (ss)

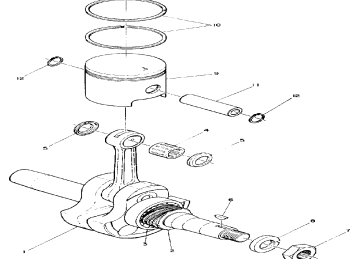 


Piston and crankshaft (star)

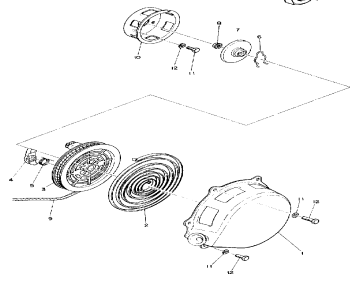 


Recoil starter (star)

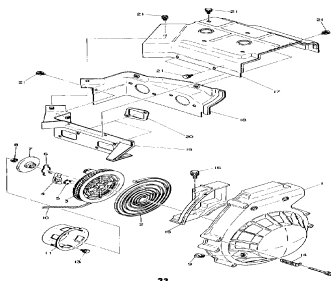 


Recoil starter and blower housing

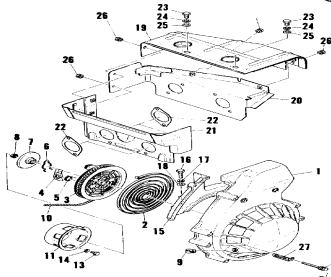 


Recoil starter and blower housing (ss)

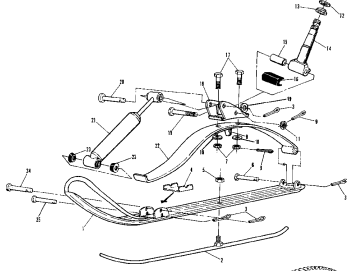 


Ski

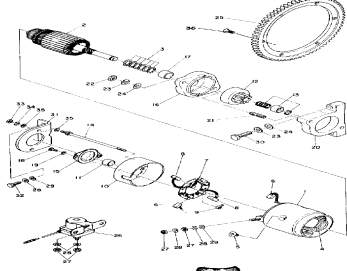 


Starter

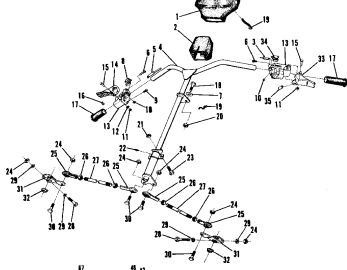 


Steering

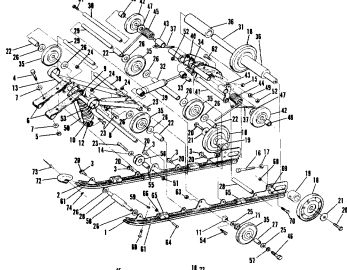 

Suspension (ss)

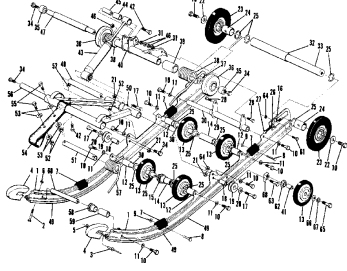 

Suspension (star) assembly no. 1540546

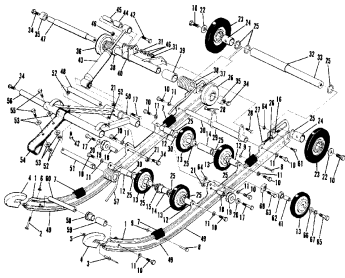 

Suspension assembly no. 1540546